#### LED-SIGNALS


$\diamond$	The ORANGE LED flashes every second.	The sensor goes into security mode.	1 Cut and restore power supply.
-	The ORANGE LED flashes 1 x.	The sensor signals an internal fault.	<ol> <li>Cut and restore power supply.</li> <li>If orange LED flashes again, replace sensor.</li> </ol>
$\bigcirc$	The ORANGE LED is on.	The sensor encounters a memory problem.	<ol> <li>Cut and restore power supply.</li> <li>If orange LED lights up again, replace sensor.</li> </ol>
×	The RED LED flashes quickly after an assisted setup.	The sensor sees the door during the assisted setup.	<ol> <li>Change the angle of the IR-curtains.</li> <li>Launch a new assisted setup. Attention: Do not stand in the detection field!</li> </ol>
	The RED LED lights up sporadically.	The sensor vibrates.	<ol> <li>Check if the sensor is fastened firmly.</li> <li>Check position of prism and cover.</li> </ol>
		The sensor sees the door.	1 Launch an assisted setup and adjust the IR angle.
		The sensor is disturbed by lamps or another sensor.	1 Choose a different frequency by remote control.
		The sensor is disturbed by the rain.	<ol> <li>Increase the IR-immunity filter by remote control.</li> <li>Select presetting 2 or 3 by push button.</li> </ol>
$\bigcirc$	The GREEN LED lights up sporadically.	The sensor is disturbed by rain and/or leaves.	<ol> <li>Select presetting 2 or 3 by push button.</li> <li>Increase radar-immunity filter by remote control.</li> </ol>
		Ghosting	1 Change radar antenna angle.
		The sensor vibrates.	<ol> <li>Check if the sensor is fastened firmly.</li> <li>Check position of cable and cover.</li> </ol>
		The sensor sees the door or other moving objects.	<ol> <li>Remove the objects if possible.</li> <li>Change radar antenna.</li> <li>Change radar field size (sensitivity).</li> </ol>
	The reaction of the door does not correspond to the LED-signal.		<ol> <li>Check output configuration setting.</li> <li>Switch value 1 (A-P) to 4 (A-A) or 4 to 1 by remote control.</li> </ol>

energy Saving

# XMA1

Opening & safety sensor for automatic sliding doors\*

### DESCRIPTION

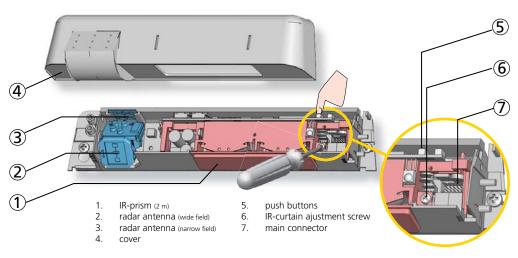

### TECHNICAL SPECIFICATIONS

Supply voltage:	12 V - 24 V AC +/-10% ; 12 V - 30 V DC -5%/+10%	
Power consumption:	< 3 W	
Mounting height:	1.8 m to 4 m	
Temperature range:	-25 °C to +55 °C	
Degree of protection:	IP54	
Norm conformity:	R&TTE 1999/5/EC; EMC 2004/108/EC	

GREEN LED	RED LED
Motion	Presence
Min. detection speed: 5 cm/s (in axis)	Typical response time: <128 ms (max. 500 ms)
Microwave and microprocessor	Active IR and self-monitored microprocessor
Transmitter frequency: 24.150 GHz	Spot diameter: 0.1 m max.
Transmitter radiated power: < 20 dBm EIRP	Number of spots: 24 or 12 by curtain
Transmitter power density: < 5 mW/cm2	Number of curtains: 2
From 15 ° to 50 ° in elevation (adjustable)	From -4 ° to +4 ° (adjustable)
Relay (free of potential contact)	Relay (free of potential contact)
Max. contact voltage: 42 V AC/DC	Max. contact voltage: 42 V AC/DC
Max. contact current: 1 A (resistive)	Max. contact current: 1 A (resistive)
Max. switching power: 30 W (DC)/60 VA (AC)	Max. switching power: 30 W (DC)/60 VA (AC)
0.5 s to 9 s (adjustable)	0.3 s or 1 s (not adjustable)
	Motion Min. detection speed: 5 cm/s (in axis) Microwave and microprocessor Transmitter frequency: 24.150 GHz Transmitter radiated power: < 20 dBm EIRP Transmitter power density: < 5 mW/cm2 From 15 ° to 50 ° in elevation (adjustable) Relay (free of potential contact) Max. contact voltage: 42 V AC/DC Max. contact current: 1 A (resistive) Max. switching power: 30 W (DC)/60 VA (AC)

FAAC S.p.A . - Via Calari, 10 40069 Zola Predosa - Italia - tel. +39 051 61724 - fax. +39 051 758518 - www.faacgroup.com

FAAC hereby declares that the XMA1 is in conformity with the basic requirements and the other relevant provisions of the standards 1999/5/EC and 2004/108/EC.


Specifications are subject to changes without prior notice.

\* Other use of the device is outside the permitted purpose and can not be guaranteed by the manufacturer.

The complete declaration of conformity is available on our website.

ENGLISH

## MOUNTING & WIRING

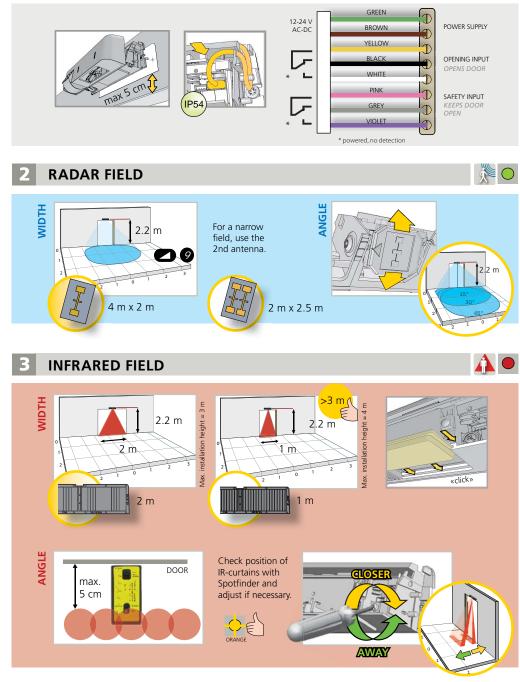

TIP: Launch an ASSISTED SETUP to verify wiring, position of the curtains and correct functioning of the sensor.

## 4 SETTINGS (by push buttons and/or remote control)

