

Instruction manual


REMOTE CONTROL DITEC GOL4

Programming from a remote control that has already been programmed:

Next to your receiver, approach an already-programmed remote control and your new remote control.

1. With a sharply pointed object, press hidden button on your already-programmed remote control. Keep it pressed down for 5 sec. The LED light on your receiver illuminates. Let the button go.
2. Press a button on your new remote control. Let it go.
3. Wait 10 seconds. Your new remote control is now programmed.

Memorizzazione a distanza GOL4 GOL4 remote storage

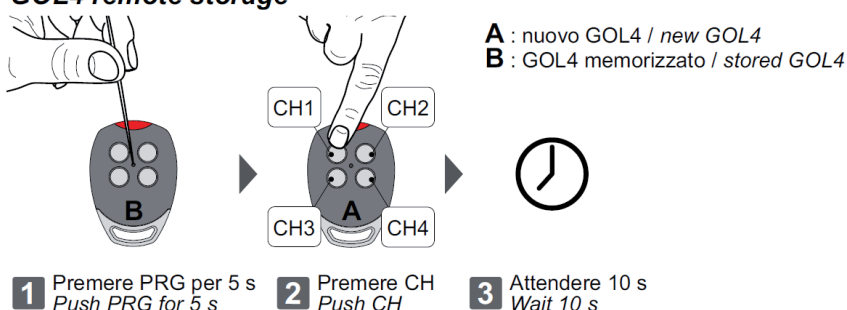

Programming from the receiver:

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button (PRG). The LED light on the receiver illuminates. Let the button go.
3. Press a button on your new remote control. Keep it pressed down. The LED light on the receiver blinks and then remains lit fixedly. Let the button go. Your new remote control is programmed.

Memorizzazione GOL4-GOL4C GOL4-GOL4C storage

